User Manual v3.0

Action Camera

Wi-Fi · Waterproof · HD

THE BASICS

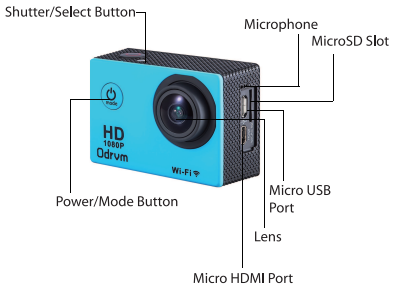

WATERPROOF HOUSING

ACCESSORIES

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

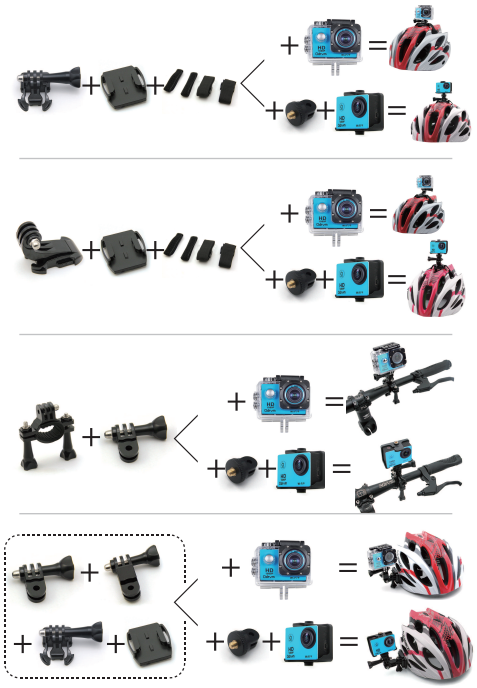

GETTING STARTED

HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:
Press the **Power/Mode Button**.

To power OFF:
Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and pressing the **Power/ Mode Button** to cycle through camera modes and settings.The modes will appear in following order:



Video	Record Video
Photo	Capture a single photo.
Burst Photo	Capture photo bursts
Time Lapse	Shoot a series of photos at set time intervals
Settings	Adjust camera settings, resolution and more.

SETTINGS

Press the **Shutter/Select Button** to enter the settings menu. By pressing the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

Video Resolution: 1080p 30fps/720p 60fps

MicroSD Card	1080p 30fps	720p 60fps
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins

Looping Video: Off/On
Time Stamp: Off/Date/Date & Time
Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0.0 /-0.3/-0.7/-1.0/-1.3/-1.7/-2.0
Photo Resolution: 12M/8M/5M/2M
Burst Photo: 3 Photos
Time Lapse: 2s/3s/5s/10s/20s/30s/60s
Continuous Lapse: Off/On
Power Frequency: 50Hz/60Hz/Auto
Language: English/Tranditional Chinese /Italian/Spanish/Portuguese/German/ Dutch/France/Czech/Polish/Turkish/ Russian/Japanese/Korean/Thai
Date & Time: MM/DD/YY, DD/MM/YY, or YY/MM/DD
Sound Indicator: Shutter On/Off, Start Up 1/2/3/ None, Beep On/Off, Volume 0/1/2/3
Upside Down: On/Off
Screen Saver: Off/1 min/3 min/5 min
Power Saver: Off/1 min/3 min/5 min
Format: No/Yes
Reset: No/Yes
Version

VIDEO MODE

Video

To record Video, make sure that the camera is in **Video** mode. If there is no **video** icon displayed, please press the **Power/Mode Button** until it appears.

To start recording:
Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

To stop recording:
Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

PHOTO MODE

Photo

To capture a **Photo**, make sure the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not displayed, press the **Power/ Mode Button** repeatedly until it appears.

To take a photo:
Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a **Burst Photo** series, make sure the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not displayed, press the **Power/Mode Button** until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:
Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE

Time Lapse

To capture a **Time Lapse** series, make sure the **Continuous Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not displayed, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

To take Time Lapse:
Press the **Shutter/Select Button** to start.

PLAYBACK

Playing Back Videos and Photos

To enter the Playback menu:
1.Verify the camera is in **Camera modes**.
2.Press the **Up/Playback Button** to enter the **Playback** menu.
3.Repeatedly press the **Power/Mode Button** to cycle through **Video** and **Photo**.
4.Press the **Shutter/Select Button** to select desired option.
5.Use **Up/Playback Button or Down/Wi-Fi Button** to cycle through the various options
6.Press the **Shutter/Select Button**.
7.To return to the **Playback menu**, press the**Power/Mode Button**.
8.**To exit**, hold down the **Up/Playback Button** for two seconds.

STORAGE/MICROSD CARDS

This camera is compatible with **8GB**, **16GB**, and **32GB** capacity **microSD**, **microSDHC**, and **microSDXC** memory cards. You must use a **microSD** card at **class 10** or above. We recommend using a well-know brand memory cards for maximum reliability in high-vibration activities.

BATTERY

Charging The Battery

To charge the battery:
1. Connect the camera to a computer or USB power supply.
2. The **Charging Status Light** remains **ON** while the battery is charging.
3. The **Charging Status Light** will turn **OFF** when the battery is fully charged.

* Charging Time: 3.5 hours

CAMERA APP

Connecting to the iSmart DV

The **iSmart DV** lets you control your camera remotely by using smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select file and more.

1. Download the **iSmart DV** to your smartphone or tablet from **Google Play** or **Apple App Store**
2. Press the **Power/Mode Button** to power the camera **ON**.
3. Make sure the camera is in **Camera mode**.
4. Press the **Down/Wi-Fi Button** to turn on **Wi-Fi***.
5. Connect wifi of your phone to the camera.
6. Enter the password "**12345678**90".
7. Open the **iSmart DV** on your smartphone or tablet.

* Press and hold the **Down/Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **iSmart DV** is compatible with smartphones and tablets listed below.

For Apple iOS:
* iPhone 5 , 5S , 6 & 6 Plus, 7 & 7 plus (iOS 8 or above)
* iPad Air & Mini (iOS 8 or above)
For Android:
* Android 4X Quad-core devices

COMPATIBILITY

* Compatibility varies by device. Please use a well-known brand sd card of 16-32 GB at class 10 or above. Please format the sd card in the compuer first then format it in the camera before usig.